

# Trådløs Hygro-thermometer og Sensor

Wireless Hygro-thermometer and sensor

**Hurtig start.** Se delenes funktioner på side 4.

1. Hurtigstart af sensor
  - a. Fjern bagpladen fra sensoren – ved at skru de 4 skruer ud.
  - b. Put 2 x AAA-batterier i (ikke inkluderet).
  - c. Vælg en kanal ved at skubbe den sorte knap på bagsiden af sensoren til siden.  
Vælg 1, 2 eller 3.
  - d. Vælg funktionen "Celcius" ved at trykke på den lille hvide knap til venstre på bagsiden. Kontroller den valgte funktion på skærmen på forsiden.
  - e. Skru bagpladen fast igen.
  
2. Hurtigstart af modtager
  - a. Skub bagpladen nedad for at få adgang til batteri-åbningen.
  - b. Put 2 x AAA-batterier i (ikke inkluderet)
  - c. Sæt bagpladen på plads igen.
  - d. Vælg samme kanal på modtageren, som du har valgt til sensoren (punkt 1C) ved at trykke på den blå knap til venstre på bagsiden af modtageren. Kontrollér den valgte kanal på modtagerskærmen, nederst til venstre.

NB: "Out" på modtageren viser temperaturen som kommer "ud" fra sensoren – det er den temperatur som anvendes til at måle temperaturudviklingen i selve varmekammeret.

Sensoren sender et signal til modtageren ca. hvert minut.

**Quick start.** See button explanation on page 4.

1. Quick start of sensor
  - a. Remove the rear panel on the sensor – by unscrewing the 4 screws.
  - b. Install 2 x AAA batteries (not included).
  - c. Select a channel - slide the black switch, on the rear of the sensor to 1, 2 or 3.
  - d. Set the sensor to Celsius – Left button on the rear of the sensor, to ensure the setting, check the screen on the front.
  - e. Replace the rear panel and screws.
  
2. Quick start of receiver
  - a. Slide the rear panel down to gain access to the batteries.
  - b. Install 2 x AAA batteries (not included).



2. Sensor/Sensor



1. Modtager/Receiver

- c. Replace the rear panel.
- d. Select the same channel that was chosen on the sensor by pressing the blue button on the left, rear of the receiver. Check the corner, left side of the screen to ensure the same channel is used.

Note: "Out" on the receiver is the temperature measured coming "out" from the sensor – This is the temperature to follow when monitoring the temperature development inside the heat chamber  
*The Sensor sends a signal to the monitor once a minute*

**Indstilling af modtageren** See delenes funktioner på side 4.

Tryk på SET i 3 sekunder for at åbne indstillingsfunktionen.

Tryk UP / DOWN for at indstille år, måned, dato, sprog, tidszone (anvend 00), 12h/24h og tid (tryk SET efter hver indstilling).

Der er to alarm funktioner.

1. Tidsindstillet ur-alarm
  - a. For at slå alarm til og fra og tryk på ALARM-knappen, den blå knap til højre på bagsiden af modtageren. For at indstille tid hold alarm knappen inde i 2 sekunder, brug UP og DOWN for at indstille tid – kan ses på skærmen.
2. Temperatur alarm
  - a. Tryk DOWN for at skifte mellem Celsius og Fahrenheit. Kontrollér funktionen på skærmen.
  - b. For at indstille temperatur alarmen hold DOWN knappen inde i 3 sekunder for at åbne indstillingsfunktionen.
  - c. Tryk UP / DOWN for at slå temperatur alarm til og fra (det er sensorens temperatur som måles). Det ses som ON eller OFF på modtageren skærmens nederste del.
  - d. Tryk SET / UP / DOWN for at indstille høj og lav temperaturen. F.eks. høj 54°C og lav 0°C.
  - e. Når den ønskede temperatur nås ringer alarmen en kort stund og sensor temperaturen blinker på modtagerens skærm.
  - f. Tryk DOWN i 3 sekunder for at åbne indstillingsfunktionen. Tryk herefter UP / DOWN for at slå temperaturalarmen fra og SET når færdig.

Vi anbefaler at rum temperaturen er 20°C eller over før man anvender Heat Pro.

NB: Den trådløs Hygro-thermometer mäter også relativ luftfugtigheten, mät i % RH; (ses til højre på skærmen) og har en indbygget lav temperatur alarmen. Disse funktioner anvendes ikke mht. Insektsbekämpelse.

**Setting the receiver** See button explanation page 4.

Press SET for 3 seconds to open the setting mode.

Press UP / DOWN to set the year, month, date, language, time zone (set at 00), 12h/24h clock and time (press set after each setting).


There are two alarm functions.

1. Timer with clock alarm
  - a. Press the Alarm button on the rear of the receiver to activate or close the alarm and to see the previously set time. Blue button on the right on the rear of the receiver. Setting can be seen on the screen. To set the alarm time: press the blue button for 2 seconds, press UP or DOWN to set the time. Setting can be seen on the screen.
2. Temperature alarm
  - a. Press DOWN to change between Celsius and Fahrenheit. Check on the screen.
  - b. Press DOWN for 3 seconds to open the setting mode.
  - c. Press UP / DOWN to activate or close the alarm. (It is the temperature of the sensor that is measured) ON or OFF setting can be seen on the lower half of the screen.
  - d. Press SET / UP / DOWN to set the desired high and low temperatures for example high 54°C and low 0°C.
  - e. Once the desired temperature is reached, the alarm will ring for a short time and the sensors' temperature reading on the screen will blink.
  - f. Press Down for 3 seconds to open the setting mode, then UP / DOWN to switch the alarm off, press SET to finish.

We recommend that the surrounding temperature is 20°C or above before using the Heat Pro Chamber.

Note: The Hygro-thermometer also measures the relative humidity of the air in %RH; (Can be seen on the right of the screen) and has a low temperature alarm. These functions are not in use with insect treatments

### Sensor/Sensor

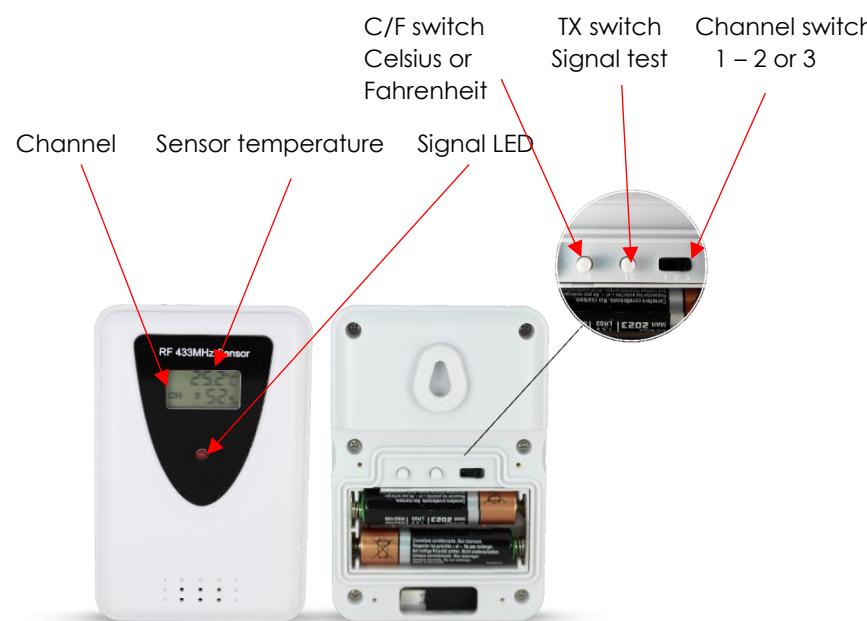

### Modtager/Receiver

